

vtech[®]

User's manual



LS1350-B

www.euphones.vtech.com

1. IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all the instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
5. Do not expose the telephone to direct sunlight or extreme cold environment. Do not put the telephone close to heating sources such as radiators, cookers, etc.
6. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
7. Unplug this product from the wall outlet and refer servicing to VTech/
distributor under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If the product does not operate normally by following the operating instructions.
 - If the product has been dropped and the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
8. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
9. Do not use the telephone to report a gas leak in the vicinity of the leak.
10. Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the default battery capacities.
11. The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or unit damages. The manufacturer will not be held liable for damage arising from such non-compliance.
12. Do not use third party charging bays. The batteries may be damaged.
13. Please note the correct polarity while inserting the batteries.
14. Battery should not be exposed to excessive heat such as bright sunshine or fire and immersed in water.

DISPOSAL WARNING

1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products/battery should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance/battery will help prevent potential negative consequences for the environment and human health.



For more detailed information about disposal of your old appliance/battery, please contact your city office, waste disposal service or the shop where you purchased the product.

If you have questions about this product, or having difficulty with setup or operation, contact our Customer Service Centre.

POWER ADAPTOR INFORMATION

- Power adaptor** Vtech (Qingyuan) Plastics & Electronics Co. Ltd. - Model: VT04EEU06045, Input 100-240V AC 50/60Hz 150mA, Output 6VDC 450mA (EU plug).
- Battery** NI-MH PACK x1, 2.4V, 400mAh

For pluggable equipment, the socket outlet shall be installed near the equipment and shall be easily accessible.


2. SET UP THE TELEPHONE

2.1 Package Contents

The package contains the following items:

- 1 Handset
- 1 Base station
- 1 Power adaptor for base station
- 1 Telephone line cord
- 1 NiMH rechargeable battery pack
- 1 User's manual


2.2 Connect the Base

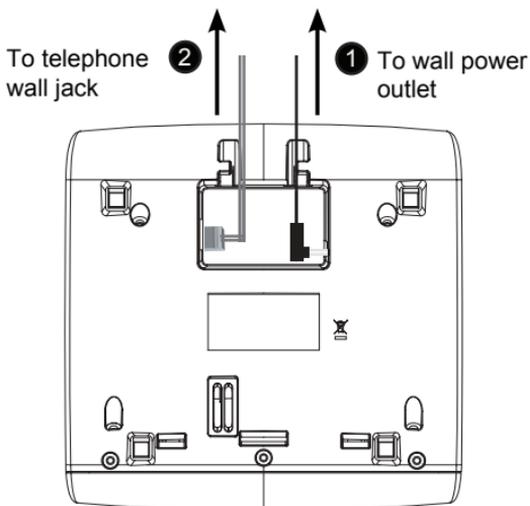

NOTE

- Use only the supplied power adapter.

2.3 Install and Charge the Handset Battery

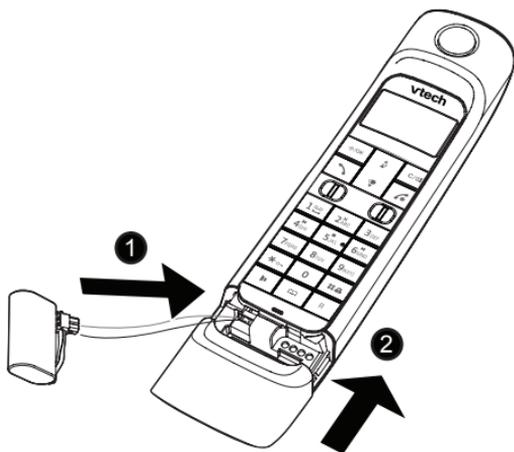


NOTES

- Use only the supplied NiMH rechargeable battery pack.
- If you do not use the handset for a long time, disconnect and remove the battery to prevent possible leakage.


3. GET TO KNOW YOUR PHONE

3.1 Overview of the Handset

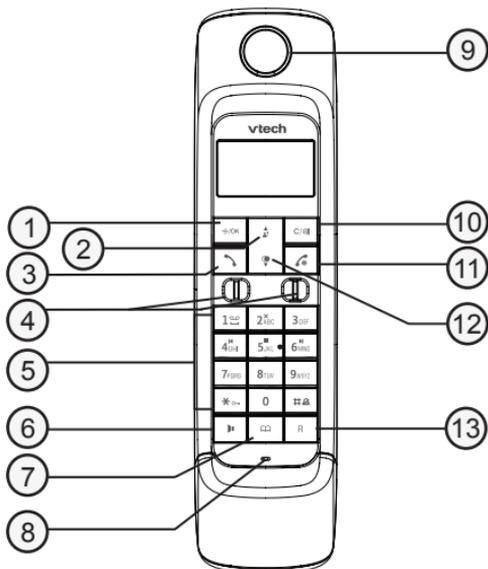

1. /OK MENU / OK
2. UP / REDIAL LIST / VOLUME UP
3. TALK ON / RECALL(FLASH)
4. CHARGING CONTACTS
5. ALPHANUMERIC KEYPAD, * (STAR), # (HASH)
6. SPEAKERPHONE
7. PHONEBOOK
8. MICROPHONE
9. EARPIECE
10. C/DELETE / INTERCOM
11. TALK OFF / CANCEL / BACK
12. DOWN / CALL LIST / VOLUME DOWN
13. R RECALL

3.2 Overview of the Base Station

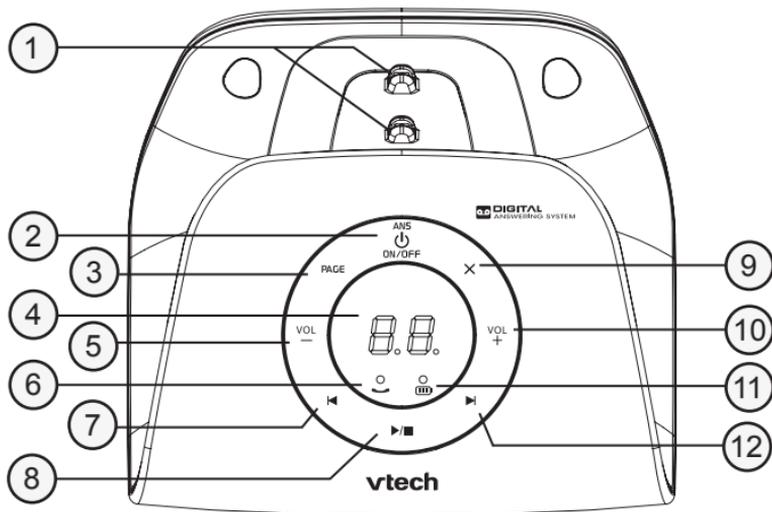

1. CHARGING CRADLE

2. **ANS/ON/OFF**

3. PAGE

Press to page all system handsets.

4. MESSAGE WINDOW

5. **VOLUME -**

Press to decrease the volume of an incoming call or message playback.

6. **IN USE LIGHT**

Flashes when there is an incoming call, the handset is in use, or the answering system is answering an incoming call.


7. **REPEAT**

Press to play the previous message.

8.  **PLAY/STOP**
Press to play message or to stop playing message.
9.  **DELETE**
Press to delete the playing message. Press and hold to delete all old messages.
- VOL
10.  **VOLUME +**
Press to increase the volume of an incoming call or message playback.
11.  **CHARGING INDICATOR**
Turns on when the handset is placed on the charging cradle for charging.
12.  **SKIP**
Press to play the next message.

3.3 Handset LCD display icons and symbols

The LCD display gives you information on the current status of the telephone.

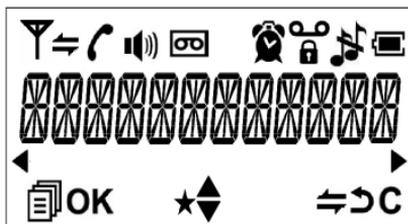

Display icons	Icons can be Steadily On (visible), Flashing or Off (not visible)
	Scroll up / down the menu items / Phonebook list / Redial list / Call List.
	Steadily on when the handset is with reception range. Flashes when out of range or not registered to the base.
	Steadily on when an intercom is in progress. Flashes when there is an incoming intercom call.
	Steadily on when a call is in progress.
	Steadily on when the ringer is switched off.
	Steadily on when an alarm is set. Flashes when the alarm time set before reaches.
	Steadily on when the keypad is locked.
	Steadily on when a message is received at the telephone service provider.
	Steadily on when the battery is fully charged. Whole icon flashes when the battery is charging.
	Flashes when low battery power level is detected and the handset needs charging.
	Steadily on when more characters are existed before the text currently displayed.

	Steadily on when more characters are existed after the text currently displayed.
	Press to select more menu options if applicable
OK	Press to confirm the current selection if applicable.
	Press to initial an intercom call when idle.
	Press to go back to previous menu level or cancel the current action if applicable.
C	Press to clear a character or stop the alarm if applicable, press to mute / unmute during a call.
	Steadily on when when you have received missed calls.
	Steadily on when the speakerphone is turned on.
	Indicates that the answering system is turned on. Flashes when there are new messages received.

3.4 Menu Navigation

In idle mode:

1. Press /OK.
2. / to scroll to a menu option.
3. Press /OK to select.
-OR-
 Press to return to previous screen.
-OR-
press and hold to return to idle mode.

CALL LIST	PHONEBOOK	CALL BLOCKER	BS SETTINGS
Review Call List Under a selected Call List entry: ADD TO PB DELETE DELETE ALL DETAILS	Review Phonebook list Under a Phonebook entry: ADD VIEW EDIT DELETE DELETE ALL PB STATUS	ON OFF	BS RINGER RING VOLUME DELETE HS DIAL MODE FLASH TIME CHANGE PIN

HS SETTINGS	REGISTRATION	DEFAULT	ANS. MACHINE
ALARM RING SETUP TONE SETUP RENAME HS HS DISPLAY AUTO ANSWER DATE & TIME	PIN?	PIN?	MSG PLAYBACK DELETE ALL MEMO TAM ON/OFF TAM SETTINGS ANSWER MODE OGM SETTINGS ANSWER DELAY RECORD TIME REMOTE ACC. COMPRESSION BS SCREENING CHANGE PIN

4. USE YOUR PHONE

4.1 Switch On/Off the Handset

Press and hold .

4.2 Make a Call

Enter phone number. Press  / .

4.3 Answer an Incoming Call

Press  / .

-OR-

If **AUTO ANSWER** is **ON**:

Lift the handset.

4.4 Adjust Listening Volume During a Call

To adjust listening volume during a call:

Press  / .

4.5 Mute / end mute a Call (Microphone Off/On)

To mute or end mute the microphone during a call:

Press **C** / .

4.6 End a Call

Press .

-OR-

Place the handset on the base.

4.7 Turn the Handset Ringer On/Off

Press and hold **#** .

4.8 Turn the Keypad Lock On/Off

Press and hold ***** .

4.9 Redial

4.9.1 Redial a Number from the Redial List

1. Press .
2.  → (a desired entry).
3. Press  / .

NOTE

If there is no number in the list, the display shows “EMPTY”.

4.9.2 Store a Redial Number into the Phonebook

1. Press .
2.  → (a desired entry).
3. Press  / OK →  → **ADD TO PB**.
4. Press  / OK → Enter name.
5. Press  / OK → Enter number.
6. Press  / OK →  → **MELODY 1 - MELODY 10**.
7. Press  / OK.

4.9.3 Delete a Redial Number

1. Press .
2.  → (a desired entry).
3. Press  / OK →  → **DELETE**.
4. Press  / OK twice.

4.9.4 Delete All Redial Numbers

1. Press .
2. Press  / OK →  → **DELETE ALL**.
3. Press  / OK twice.

4.10 Find the Handset (PAGING)

1. Press **PAGE** on the base.
2. Press  /  /  on handset, or press **PAGE** on the base to stop paging.

5. PHONEBOOK

5.1 Store a Number Entry in the Phonebook

1. Press /OK → ▲/▼ → **PHONEBOOK**.
2. Press /OK.

NOTE

If there is no entry in the list, the display shows “**EMPTY**”.

3. Press /OK → ▲/▼ → **ADD**.
4. Press /OK → Enter name.
5. Press /OK → Enter number.
6. Press /OK → ▲/▼ → **MELODY 1 - MELODY 10**.
7. Press /OK.

5.2 Dial an Entry

1. Press /OK → ▲/▼ → **PHONEBOOK**.
2. Press /OK → ▲/▼ → (a desired entry).
3. Press / to dial out.

5.3 Edit a Phonebook Entry

1. Press /OK → ▲/▼ → **PHONEBOOK**.
2. Press /OK → (a desired entry).
3. Press /OK → ▲/▼ → **EDIT**.
4. Press /OK → Edit name.
5. Press /OK → Edit number number.
6. Press /OK → ▲/▼ → **MELODY 1 - MELODY 10**.
7. Press /OK.

5.4 Delete a Phonebook Entry

1. Press ⇨/OK → ▲/▼ → **PHONEBOOK**.
2. Press ⇨/OK → (a desired entry).
3. Press ⇨/OK → ▲/▼ → **DELETE**.
4. Press ⇨/OK twice.

5.5 Delete All Phonebook Entries

1. Press ⇨/OK → ▲/▼ → **PHONEBOOK**.
2. Press ⇨/OK twice → ▲/▼ → **DELETE ALL**.
3. Press ⇨/OK twice.

5.6 Check Number of Phonebook Entry Used

You can check how many phonebook entries have been occupied in your phone and how many entries are available for you to store in the phonebook.

1. Press ⇨/OK → ▲/▼ → **PHONEBOOK**.
2. Press ⇨/OK twice → ▲/▼ → **PB STATUS**.
3. Press ⇨/OK

6. PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalize your phone the way you like it to work.

6.1 Date and Time Settings

You will need to set the correct time and date so that you know when you received answering machine (applicable to model with answering machine) or call list entries.

6.1.1 Set the Date Format

1. Press ⇨/OK → ▲/▼ → **HS SETTINGS**.
2. Press ⇨/OK → ▲/▼ → **DATE & TIME**.
3. Press ⇨/OK → ▲/▼ → **DATE FORMAT**.
4. Press ⇨/OK → ▲/▼ → **DD-MM-YY / MM-DD-YY**.
5. Press ⇨/OK.

6.1.2 Set the Time

1. Press ⇨/OK → ▲/▼ → **HS SETTINGS**.
2. Press ⇨/OK → ▲/▼ → **DATE & TIME**.
3. Press ⇨/OK → ▲/▼ → **SET TIME**.
4. Press ⇨/OK → Enter time.
5. Press ⇨/OK → ▲/▼ → **AM** or **PM** .

6.1.3 Set the Date

1. Press ⇨/OK → ▲/▼ → **HS SETTINGS**.
2. Press ⇨/OK → ▲/▼ → **DATE & TIME**.
3. Press ⇨/OK → ▲/▼ → **SET DATE**.
4. Press ⇨/OK → Enter Year.
5. Press ⇨/OK → Enter Date.
6. Press ⇨/OK.

6.2 Handset Settings

6.2.1 Alarm

1. Press ⇨/OK → ▲/▼ → **HS SETTINGS**.
2. Press ⇨/OK → ▲/▼ → **ALARM**.
3. Press ⇨/OK → ▲/▼ → **ON / OFF**.

If **ON** is selected:

1. Press ⇨/OK → Enter time.
2. Press ⇨/OK → **AM** or **PM** .
3. Press ⇨/OK. You will need to set the snooze function.
4. Press ⇨/OK → ▲/▼ → **ON / OFF**.
5. Press ⇨/OK.

6.2.2 Set the Ringer Melody for External Calls

1. Press ⇨/OK → ▲/▼ → **HS SETTINGS**.
2. Press ⇨/OK → ▲/▼ → **RING SETUP**.
3. Press ⇨/OK → ▲/▼ → **EXT. RING**.
4. Press ⇨/OK → ▲/▼ → **MELODY 1 - MELODY 10**.
5. Press ⇨/OK.

6.2.3 Set the Ringer Melody for Internal Calls

1. Press ⇨/OK → ▲/▼ → **HS SETTINGS**.
2. Press ⇨/OK → ▲/▼ → **RING SETUP**.
3. Press ⇨/OK → ▲/▼ → **INT. RING**.
4. Press ⇨/OK → ▲/▼ → **MELODY 1 - MELODY 10**.
5. Press ⇨/OK.

6.2.4 Set the Ringer Volume

1. Press ⇨/OK → ▲/▼ → **HS SETTINGS**.
2. Press ⇨/OK → ▲/▼ → **RING SETUP**.
3. Press ⇨/OK → ▲/▼ → **RING VOLUME**.
4. Press ⇨/OK → ▲/▼ → **VOLUME 1 - VOLUME 5, or VOLUME OFF**.
5. Press ⇨/OK.

6.2.5 Set Alert Tones

A single beep is emitted when you press a key. You can turn on or off the key tone. You can also turn on the alert tones when low battery and out of range are detected. Low battery tone will be emitted while you are talking with the phone to alert you that you need to charge your battery. Out of range tone will be emitted while the handset is out of range from the base.

1. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **HS SETTINGS**.
2. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **tone SETUP**.
3. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **KEY TONE / BATTERY TONE / OUT OF RANGE**.
4. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **ON / OFF**.
5. Press \diamond /OK.

6.2.6 Rename the Handset

1. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **HS SETTINGS**.
2. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **RENAME HS**.
3. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow Enter name.
4. Press \diamond /OK.

6.2.7 Set the Auto Answer

1. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **HS SETTINGS**.
2. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **AUTO ANSWER**.
3. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **ON / OFF**.
4. Press \diamond /OK.

6.3 Base Settings (Using Handset)

6.3.1 Set the Base Ringer Melody

1. Press ⇨/OK → ▲/▼ → **BS SETTINGS**.
2. Press ⇨/OK → ▲/▼ → **BS RINGER**.
3. Press ⇨/OK → ▲/▼ → **MELODY 1 - MELODY 5**.
4. Press ⇨/OK.

6.3.2 Set the Base Ringer Volume

1. Press ⇨/OK → ▲/▼ → **BS SETTINGS**.
2. Press ⇨/OK → ▲/▼ → **RINGER VOLUME**.
3. Press ⇨/OK → ▲/▼ → **VOLUME 1 - VOLUME 5 / VOLUME OFF**.
4. Press ⇨/OK.

6.3.3 Set the Dial Mode

The default dial mode is best suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

1. Press ⇨/OK → ▲/▼ → **BS SETTINGS**.
2. Press ⇨/OK → ▲/▼ → **DIAL MODE**.
3. Press ⇨/OK → ▲/▼ → **TONE** or **PULSE**.
4. Press ⇨/OK.

6.3.4 Set the Flash Time

The default flash time is best suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

1. Press ⇨/OK → ▲/▼ → **BS SETTINGS**.
2. Press ⇨/OK → ▲/▼ → **FLASH TIME**.
3. Press ⇨/OK → ▲/▼ → **SHORT, MEDIUM** or **LONG**.
4. Press ⇨/OK.

6.3.5 Change the System PIN Code

The default system PIN code is **0000**.

1. Press ⇨/OK → ▲/▼ → **BS SETTINGS**.
2. Press ⇨/OK → ▲/▼ → **CHANGE PIN**.
3. Press ⇨/OK.
4. Enter old **PIN** (Default: **0000**).
5. Press ⇨/OK → Enter new **PIN**.
6. Press ⇨/OK → Enter new **PIN** again.
7. Press ⇨/OK.

6.4 Reset Your Phone

You can reset your phone to the default settings. After reset, all settings and entries (except phonebook) will be deleted.

1. Press ⇨/OK → ▲/▼ → **DEFAULT**.
2. Press ⇨/OK → Enter old **PIN** (Default: **0000**).
3. Press ⇨/OK twice.

7. CALLER DISPLAY

7.1 Call List

This feature is available if you have subscribed to the Caller ID service from your local service provider telephone company.

7.2 Store a Call List Number into the Phonebook

1. Press .
2. / → (a desired entry).
3. Press /OK → / → **ADD TO PB.**
4. Press /OK → Enter name.
5. Press /OK → Edit number.
6. Press /OK → / → **MELODY 1 - MELODY 10.**
7. Press.

7.3 Delete an Entry in the Call List

1. Press .
2. / → (a desired entry).
3. Press /OK → / → **DELETE.**
4. Press /OK twice.

7.4 Delete All Call List Entries

1. Press .
2. Press /OK → / → **DELETE ALL.**
3. Press /OK twice.

7.5 View the Details of the Call List Entry.

1. Press .
2. Press /OK → / → **DETAILS.**
3. Press /OK.

8. ANSWERING MACHINE

Your phone includes a telephone answering machine that records unanswered calls when it is on. The LCD display (two digits seven segment display) on the base will show the number of the messages when the answering machine is on. The answering machine can store up to 59 messages within the maximum recording time of approximately 14 minutes. As well as recording incoming messages, you can record memos for other users of your phone. If the answering machine memory is full, the Handset will display **TAM FULL** and the handset name alternatively in standby, or display **TAM FULL** and the date/time information in standby which depends on which kind of information (Handset name or Date/Time) is selected to display in idle mode.

8.1 Turn On/Off the Answering Machine

You can turn on or off the answering machine through the handset. When the answering machine is set to **ON**, calls will be answered after the set answer delay and the caller can then leave you a message. When the answering machine is set to **OFF**, calls will be answered after 10 rings and the answer only message will be played to your callers. They will not be able to leave you a message.

To turn the answering system on or off:

Press  on the base.

-OR-

1. Press /OK → /▼ → **ANS. MACHINE.**
2. Press /OK → /▼ → **TAM ON/OFF.**
3. Press /OK → /▼ → **ON / OFF.**
4. Press /OK.

NOTES

- If answering machine is set to **ON**,  displays on the handset LCD and the 7-seg LED on the base station will display the number of incoming messages.
- If answering machine is set to **OFF**,  will disappear from the handset LCD and the 7-seg LED on the base station will display - -.

8.2 Play messages on TAM

If you have new messages, they are played first, and then saved as old messages until they are deleted. Old messages are played again after all new messages are played completely.

Using the base:

- Press ►/■ – listen to messages and memos.
- Press ►/■ again – stop the playback.
- Press ◀ once – repeat the current message from the beginning.
Press ◀ twice – skip back to the previous message during message playback.
- Press ▶ – skip the current message and listen to the next message.
Press X – delete the current message being played.

Using the handset:

1. Press ⇨/OK → ▲/▼ → **ANS. MACHINE.**
2. Press ⇨/OK → ▲/▼ → **MSG PLAYBACK.**
3. Press ⇨/OK to start playing back the messages from speakerphone.

Options on handset during message playback

- Press 5 – stop message playback.
- Press 4 – skip to repeat playing the current message from the beginning.
Press 4 twice – skip backward to the previous message.
- Press 6 – skip to play next message.
- Press 2 – delete the current message playback

8.3 Delete all Messages in the Answering Machine

Using the base:

Press and hold X – delete all previously reviewed messages.

Using the handset:

1. Press ⇨/OK → ▲/▼ → **ANS. MACHINE.**
2. Press ⇨/OK → ▲/▼ → **DELETE ALL.**
3. Press ⇨/OK twice.

NOTES

- You cannot delete new messages, so you will have to play them before trying to delete.
- If there is no more message in the answering machine, “**EMPTY**” will display and the handset will return to **ANS. MACHINE** menu.

8.4 Record Memo on the Answering Machine

You can record your memo message for another user. When you record a memo, the message counter will increase by one and the message can be played in the same way as answering machine messages. Memo recording can still function even when the answering machine is turned off.

Using the handset:

1. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **ANS. MACHINE**.
2. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **MEMO**.
3. Press \diamond /OK \rightarrow start recording.
4. Press \diamond /OK – save the memo.
-OR-
Press **C**/ \otimes – not to save the memo.

8.5 Answering Machine Settings

You can use the **TAM SETTINGS** menu through the handset to change the settings of your answering machine.

8.5.1 Set the Answer Mode

By default, the answer machine is set in **ANS & REC** mode, which allows callers to leave a message. This mode can be changed to **ANSWER ONLY**, which does not allow callers to leave a message. In that case, your callers will be prompted to call back later.

Using the handset:

1. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **ANS. MACHINE**.
2. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **TAM SETTINGS**.
3. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **ANSWER MODE**.
4. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **ANS & REC / ANSWER ONLY**.
5. Press \diamond /OK.

8.5.2 Record your Outgoing Message (OGM)

You can record your own OGM for **ANS & REC** mode or **Answer Only** mode. When you record your own OGM, it will be used when the answering machine answers the call. If your personalized OGM is deleted, the pre-set OGM will be restored automatically.

Using the handset:

1. Press /OK → / → **ANS. MACHINE.**
2. Press /OK → / → **TAM SETTINGS.**
3. Press /OK → / → **OGM SETTINGS.**
4. Press /OK → / → **ANS & REC / ANSWER ONLY.**
5. Press /OK → / → **RECORD MESS.**
6. Press /OK → start recording.
7. Press /OK – save the OGM.
-OR-
Press – not to save the OGM.

8.5.3 Playback the Outgoing Message (OGM)

You can playback your own personalized OGM or the pre-set OGM for **ANS & REC** mode or **ANSWER ONLY** mode and choose to delete your personalized OGM during playback and record a new one whenever you want. Please note that pre-set OGM cannot be deleted.

Using the handset:

1. Press /OK → / → **ANS. MACHINE.**
2. Press /OK → / → **TAM SETTINGS.**
3. Press /OK → / → **OGM SETTINGS.**
4. Press /OK → / → **ANS & REC / ANSWER ONLY.**
5. Press /OK → / → **PLAYBACK.**
6. Press /OK – start playing.
7. Press /OK – stop playing.

NOTE

If a personalized OGM is not recorded before, the pre-set OGM will be played.

8.5.4 Delete a personalized OGM (Set OGM to default)

Using the handset:

1. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **ANS. MACHINE.**
2. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **TAM SETTINGS.**
3. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **OGM SETTINGS.**
4. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **ANS & REC / ANSWER ONLY.**
5. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **PLAYBACK.**
6. Press \diamond /OK – start playing.
7. Press **C**/ \otimes – delete the OGM.

8.5.5 Set the Answer Delay

You can set the number of rings before the answering system answers and starts playing your OGM. You can set the answering system to answer after two to nine rings or **TIME SAVER**.

Using the handset:

1. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **ANS. MACHINE.**
2. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **TAM SETTINGS.**
3. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **ANSWER DELAY.**
4. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow No. of Rings.
5. Press \diamond /OK.

8.5.6 Set the Recording Time of Incoming Message

You can set the maximum length of the recording time of the incoming messages.

Using the handset:

1. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **ANS. MACHINE.**
2. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **TAM SETTINGS.**
3. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **RECORD TIME.**
4. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow Recording time.
5. Press \diamond /OK.

8.5.7 Turn On or Off the Base Screening

Using the handset:

You can select to turn on or off the call screening on base.

1. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **ANS. MACHINE.**
2. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **TAM SETTINGS.**
3. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **BS SCREENING.**
4. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **ON / OFF.**
5. Press \diamond /OK.

8.5.8 Change the Compression Rate

Using the handset:

Three different compression rates (**HIGH**, **MID**, and **LOW**) are provided for you to select different quality levels of recording incoming message. The lower the compression rate, the higher the recording quality level attained.

1. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **ANS. MACHINE.**
2. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **TAM SETTINGS.**
3. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **COMPRESSION.**
4. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow Compression rate.
5. Press \diamond /OK.

8.5.9 Activate remote access

Your phone lets you check your messages, or otherwise operate your answering system, remotely. You can do this by calling the answering system when you are away from home and entering a 4-digit remote access PIN on a tone-dialing phone. Use the 4-digit remote access PIN code to prevent unauthorized access to your answering system.

8.5.9.1 Change the 4-Digit Remote Access PIN

Using the handset:

1. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **ANS. MACHINE.**
2. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **TAM SETTINGS.**
3. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **CHANGE PIN.**
4. Press \diamond /OK \rightarrow enter old PIN (default: **0000**).
5. Press \diamond /OK \rightarrow enter new PIN.
6. Press \diamond /OK \rightarrow enter new PIN again.
7. Press \diamond /OK

NOTE

If the new PIN entered in Step 6 is not matched with the new system PIN entered in Step 5, user is requested to enter the valid system PIN again in Step 5.

7. Press \diamond /OK.

8.5.9.2 Activate or Deactivate Remote Access

Using the handset:

1. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **ANS. MACHINE.**
2. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **TAM SETTINGS.**
3. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **REMOTE ACCESS.**
4. Press \diamond /OK \rightarrow \blacktriangle / \blacktriangledown \rightarrow **ON / OFF.**
5. Press \diamond /OK.

8.5.9.3 Access Your Answering Machine Remotely

You can ring your phone from another tone-dialing phone to switch on or off the answering machine and listen to your messages remotely.

1. Call from a tone-dialing phone to your phone.
2. When the answering machine answers the calls and starts playing the OGM, press *****
0-.
3. Enter the 4-digit Remote Access PIN (default: **0000**).
4. Press the following keys to carry out your desired function.

Keys	Functions	
	While message is not playing	While message is playing
2		Delete the current message playback.
4		Skip to repeat playing the current message from the beginning. Press twice to skip backward to the previous message.
5	Play the message.	Stop the current message playback.
6		Skip to play the next message.
7	Turn on the answering machine.	
8		Stop the current message playback.
9	Turn off the answering machine.	
*	Enter the 4-digit remote access PIN.	

NOTES:

- If your answering machine is switched off, the phone will enter into the remote access mode after 10 rings. You can press *****
0- and then enter the 4-digit remote access PIN (Default Remote Access PIN is 0000) to activate the remote access feature.
- When your answering machine memory is full and the answer mode is in **ANS & RECORD**, the answer mode will change to **ANSWER ONLY** automatically.
It will change to **ANS & RECORD** mode automatically after some messages have been deleted.

8.5.10 Call Screening

When the answering machine is set to **ON** and when there is an incoming message, the base will start call screening automatically after the preset numbers of rings of answer delay.

At any time if you want to pick up the call, you can press  on the handset and the message recording will be stopped automatically. If the answering machine is in the process of recording, the message already stored will be saved.

9. TROUBLESHOOTING

Problem	Solutions
My telephone does not work at all.	<ul style="list-style-type: none">• Make sure the batteries are installed and charged correctly. For optimum daily performance, return the handset to the telephone base after use.• Remove and reinstall the batteries, then charge for up to 16 hours. If the problem isn't solved, purchase new batteries.• Make sure the power adapter is securely plugged into an outlet not controlled by a wall switch.• Make sure the telephone line cord is plugged firmly into the telephone base and the telephone wall jack.
Common cure for electronic equipment.	<p>If the telephone is not responding normally, put the handset in the telephone base. If it does not respond, try the following (in the order listed):</p> <ul style="list-style-type: none">• Disconnect the power to the telephone base.• Disconnect the batteries on the handset.• Wait a few minutes before connecting power to the telephone base.• Re-install the batteries and place the handset in the telephone base.• Wait for the handset to synchronize with the telephone base. Allow up to one minute for this to take place.

10. WARRANTY

Vtech Product Warranty

Dear Customer, Thank you for purchasing a VTech telephone. For the product warranty applicable to this product, we refer you to the VTech website **www.euphones.vtech.com** for on line registration. Your retailer will provide you with a statutory 2-year warranty. If you have a problem within the first 2 years from purchase, call the warranty helpline or email them.

For Extended Warranty

Please keep a copy of your proof of purchase; you will need this when presenting the product back to where you bought it from.

1. If you have a problem after 2 years of purchase, up to 5 years from purchase: Within 30 days of purchase you need to have registered your device at **www.euphones.vtech.com**.
2. The following parts to your device are not covered by this extended warranty: Batteries, Cables, Damage caused by pets, Damaged caused from being dropped, Water Damage, Sun Exposure Damage.

Thank You.

11. APPROVAL AND CONFORMITY

This analog telephone DECT complies with the basic requirements contained in the R&TTE Directive 1999/5/EC on radio equipment and telecommunications terminal equipment and is suitable for connection and operation in the member state indicated on the base station and/or packaging.

The declaration of conformity may be viewed at www.euphones.vtech.com.

The CE symbol confirms the conformity of the telephone and the above directive.



12. CARE AND MAINTENANCE INSTRUCTIONS

Take care of your telephone

- Your cordless telephone contains sophisticated electronic parts, so you must treat it with care.
- Avoid rough treatment.
- Place the handset down gently.
- Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

- You can damage your telephone if it gets wet. Do not use the handset in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

Electrical storms

- Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electric appliances during storms.

Cleaning your telephone

- Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or a mild soap.
- Do not use excess water or cleaning solvents of any kind.

NOTE

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If the telephone base should fall into water, **DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORDS FROM THE WALL.** Then pull the unit out by the unplugged cords.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.

DISPOSE OF USED BATTERY ACCORDING TO THE INSTRUCTIONS.

VTECH TELECOMMUNICATIONS LTD.

A member of THE VTECH GROUP OF COMPANIES.

© 2015 VTech Telecommunications Ltd. All Rights Reserved. V1.0. 12/15.

vtech[®]